








- 
- 

Image not found or type unknown








Gain先調至最低再慢慢調整

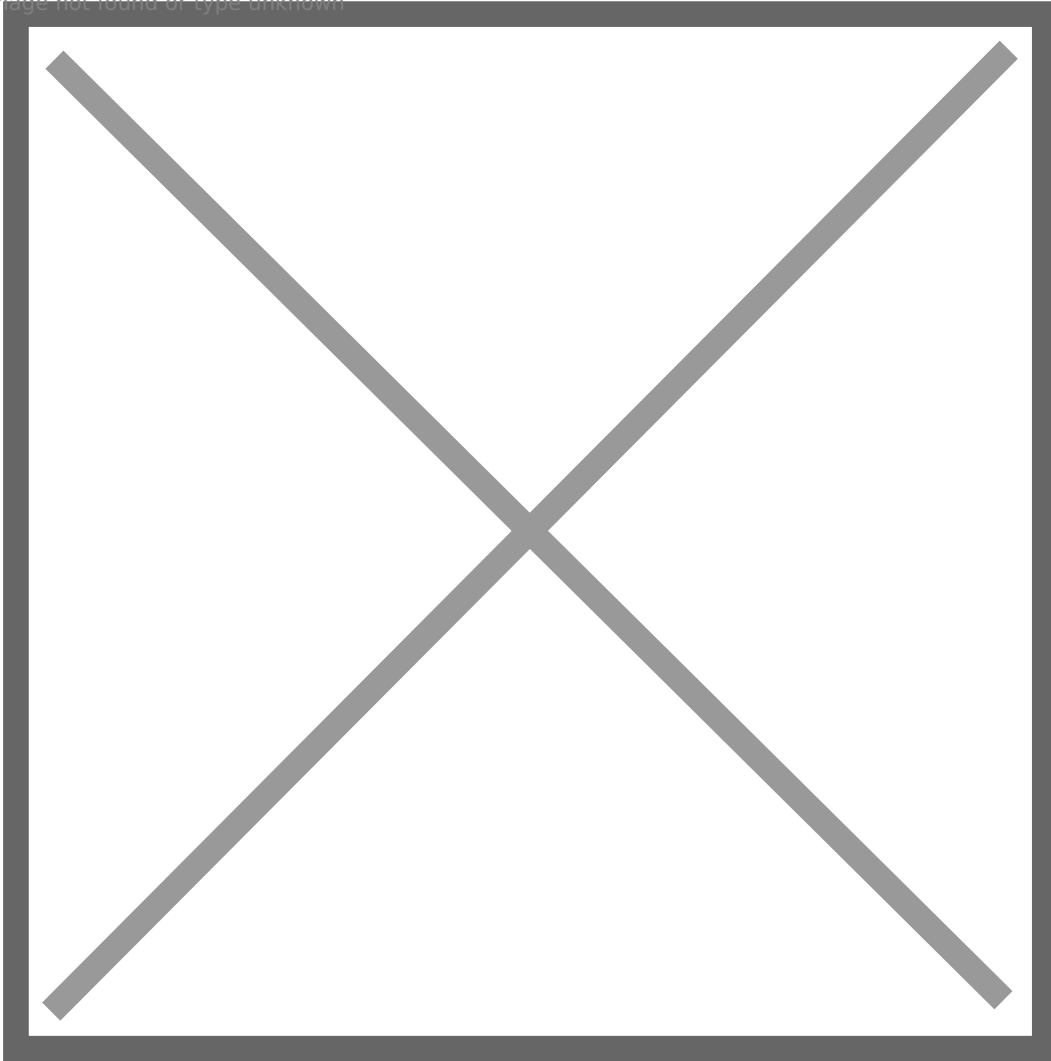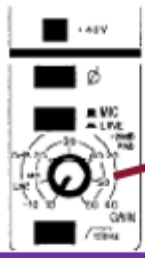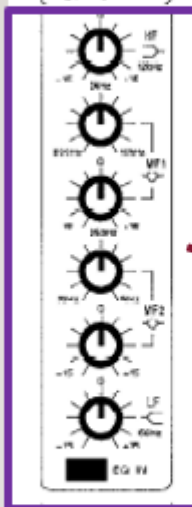


調整音質

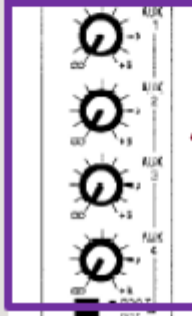

調整監聽喇叭

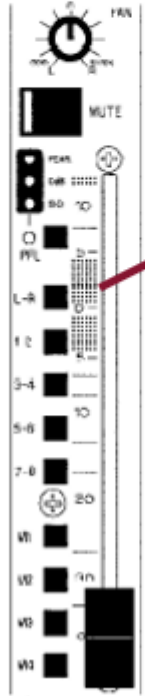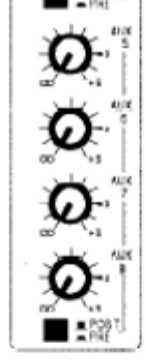


推桿推到0dB

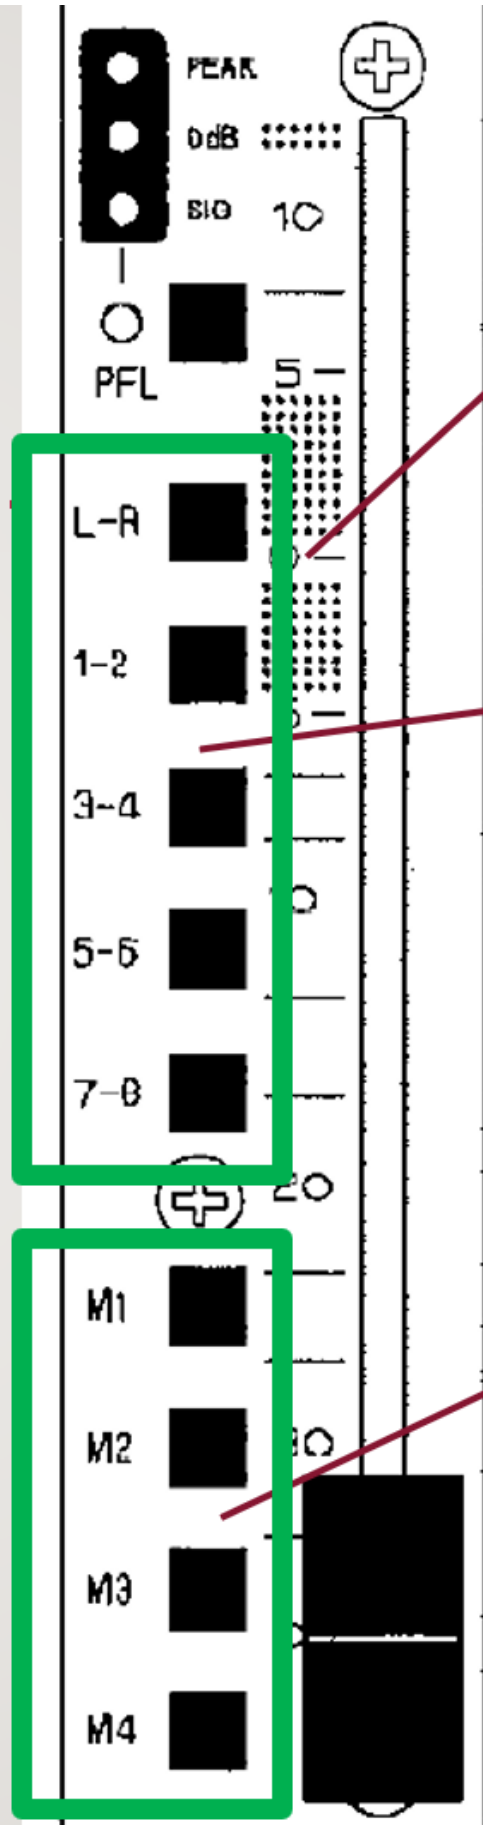

0dB


可以指定將此聲道歸類到控制盤中間的第1-8聲道，這個設定請不要變動

Mute Group
 按下就可以將此聲道歸類到M1-M4這幾個群組，按下群組靜音就會同時將此生到靜音，這個設定請不要變動

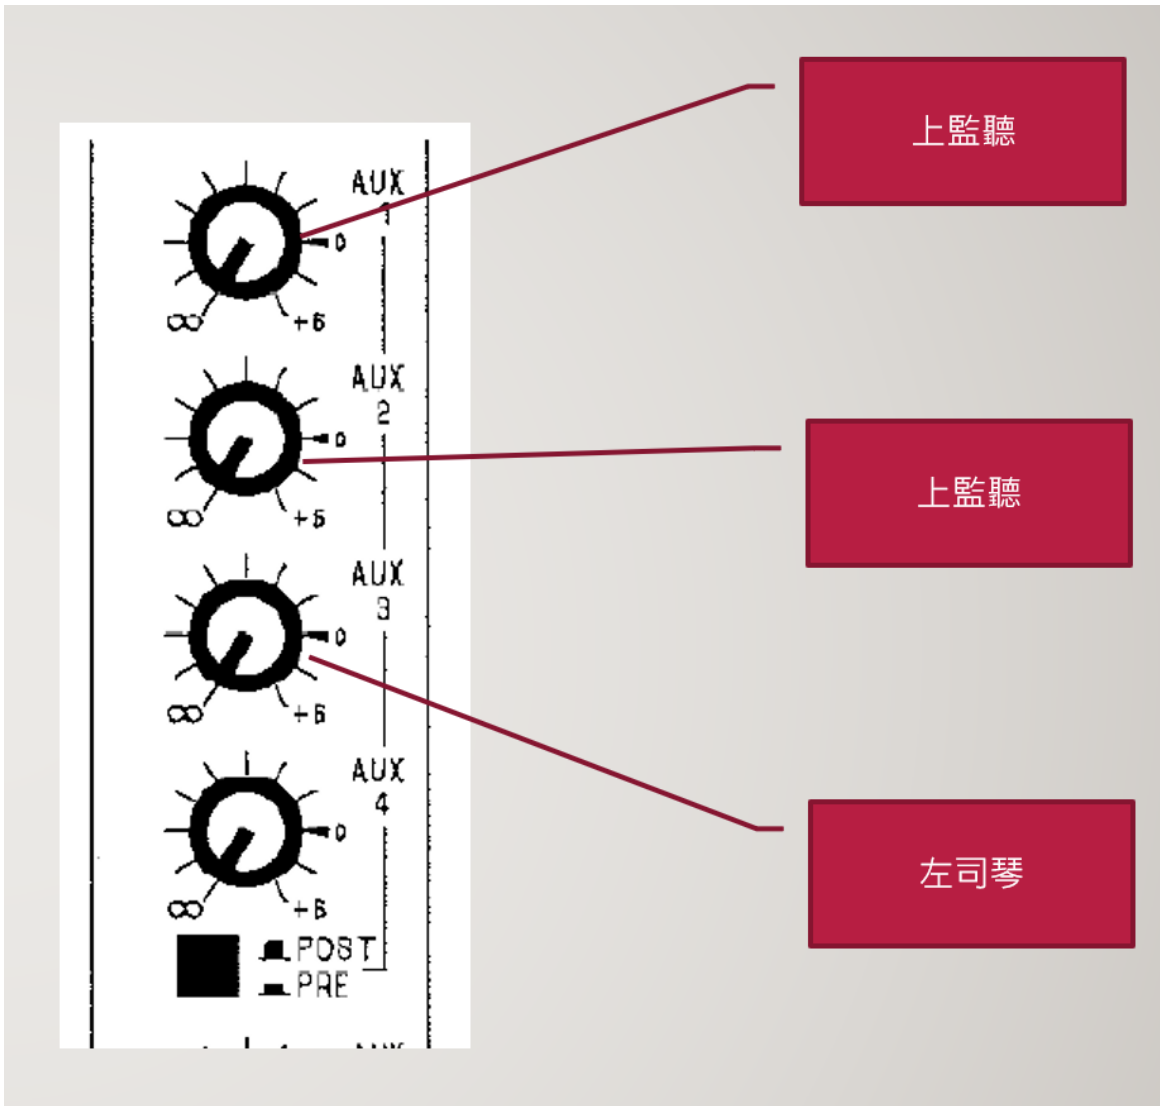

□□□(□□□)

- HF=□□
- MF1=□□□
- MF2=□□□
- LF=□□
- □□□□□□□□□□
- □□□□□□□□□□

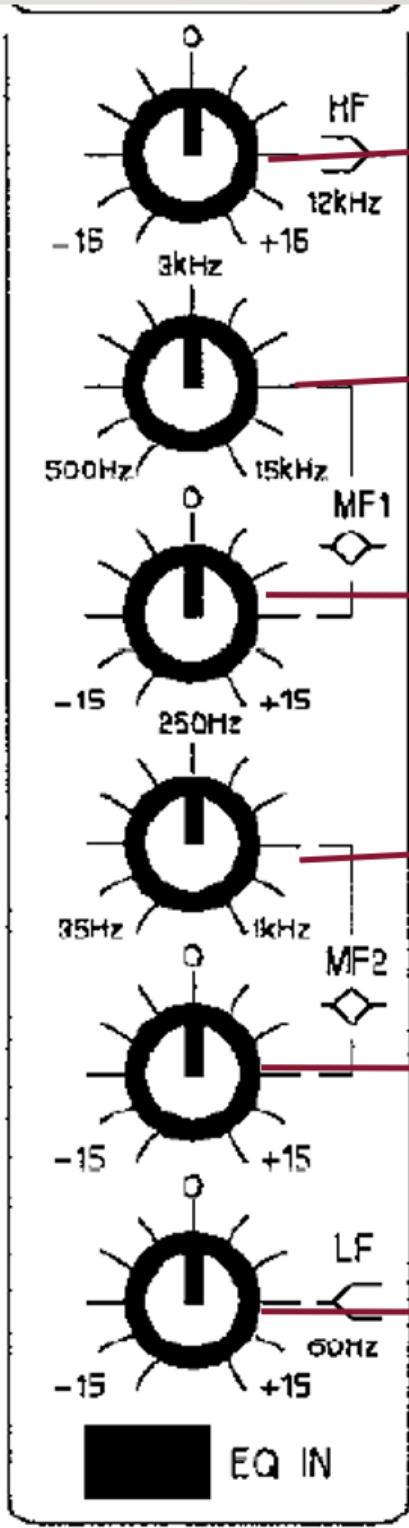

高音增益衰減
(12000Hz上下)

中高音分類點
可以設定500Hz-
15000Hz的音頻

中高音增益衰減

中低音分類點
可以設定35Hz-
1000Hz的音頻

中低音增益衰減

低音增益衰減
60Hz上下

EQ (3F)

- 7F



Image not found or type unknown

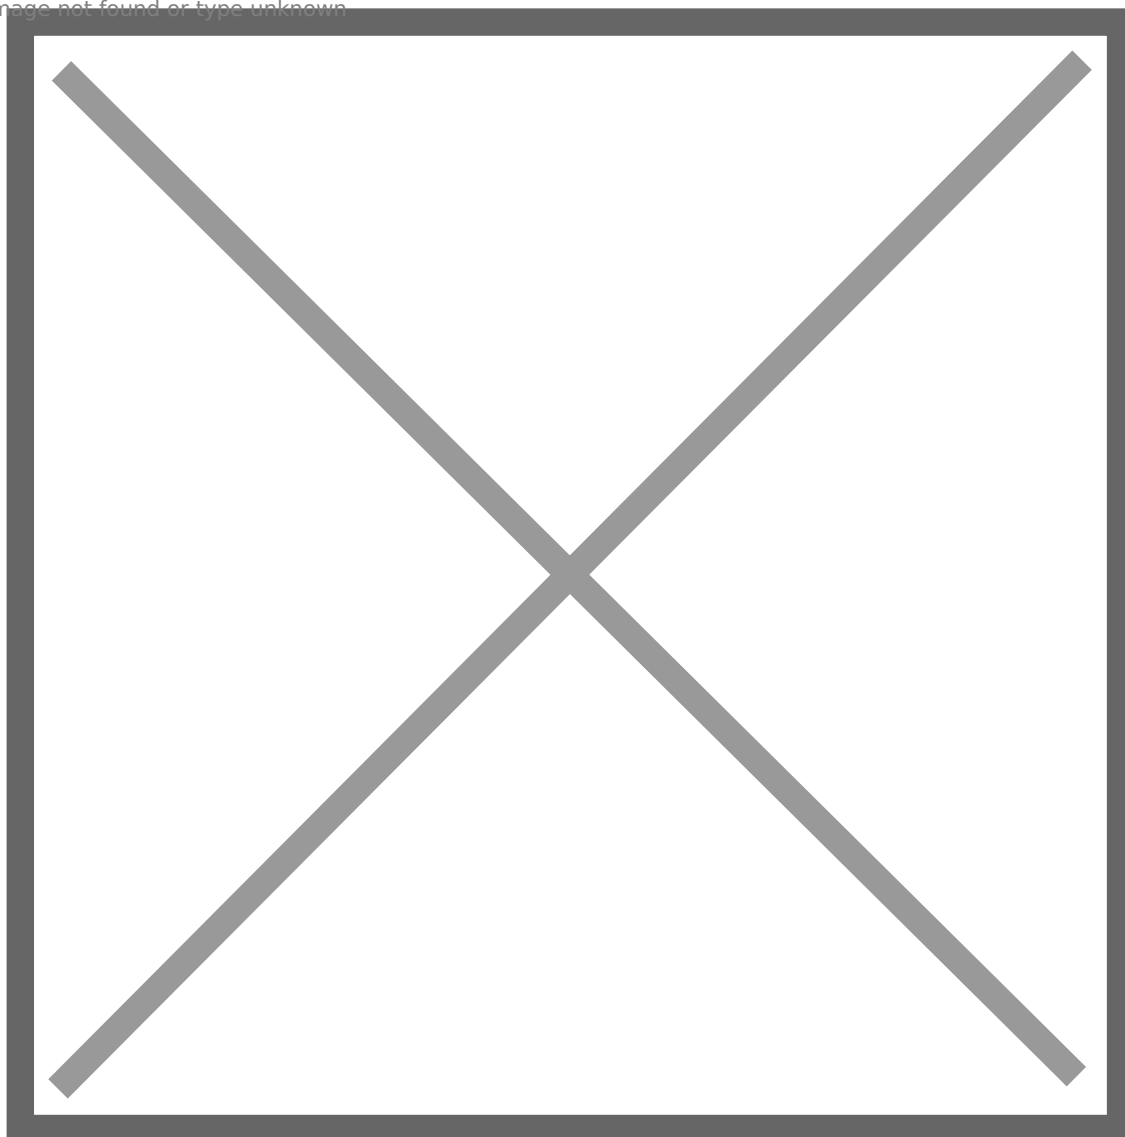


Image not found or type unknown

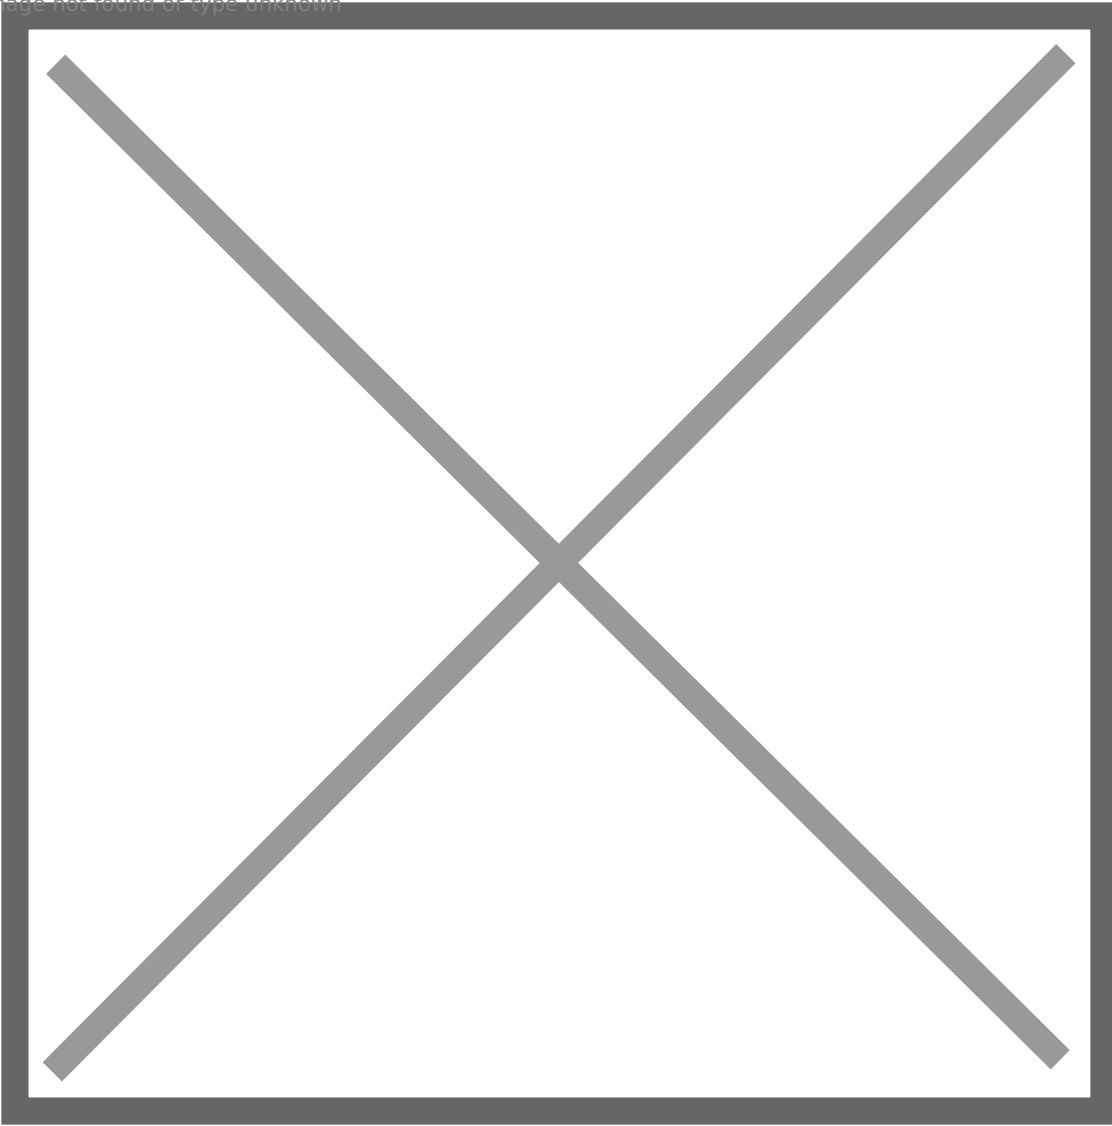


Image not found or type unknown

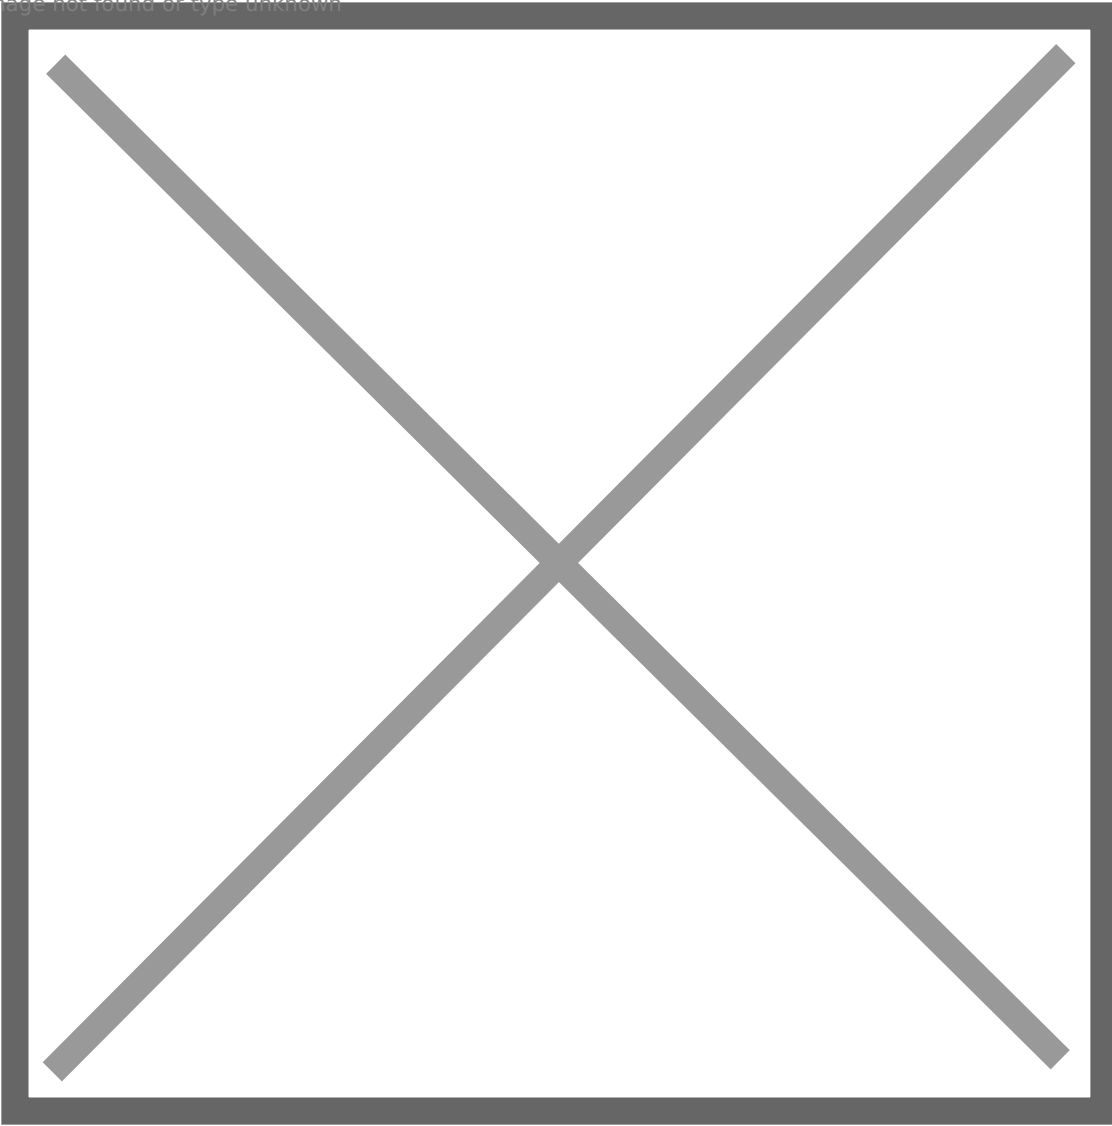


Image not found or type unknown

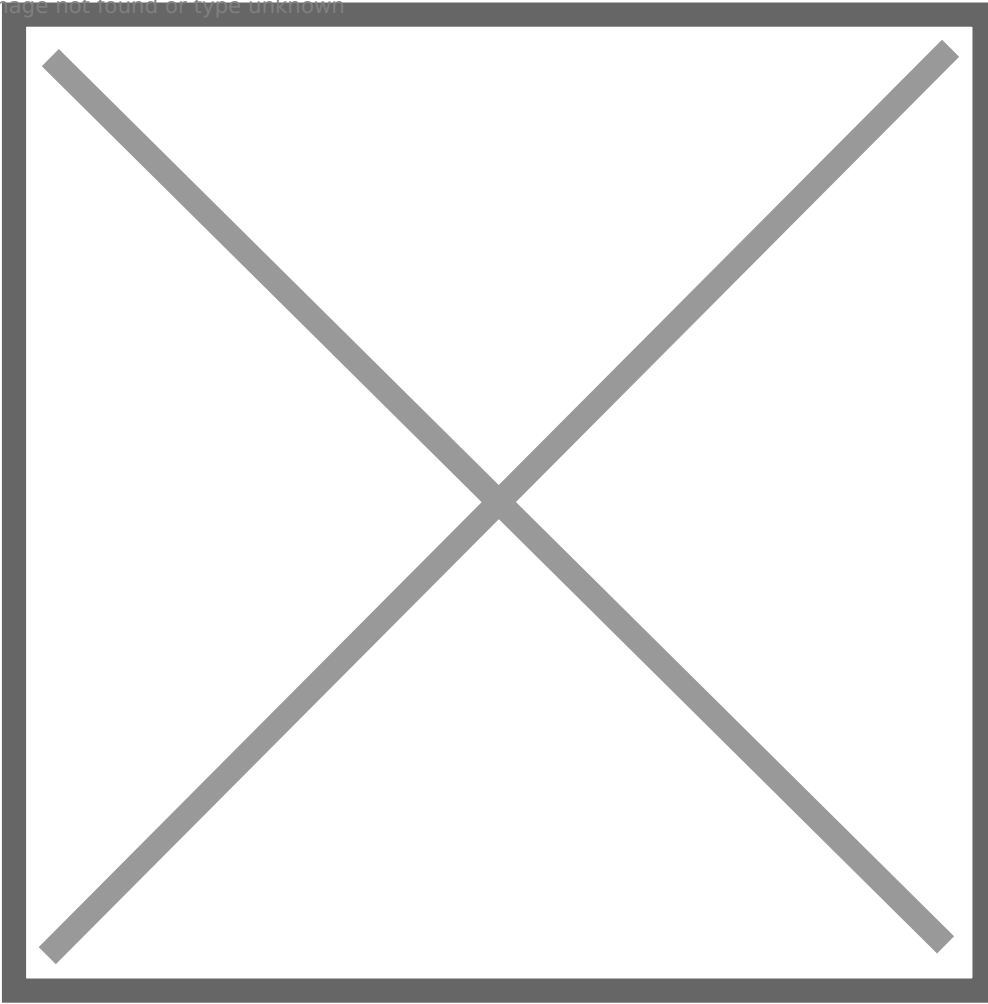


Image not found or type unknown


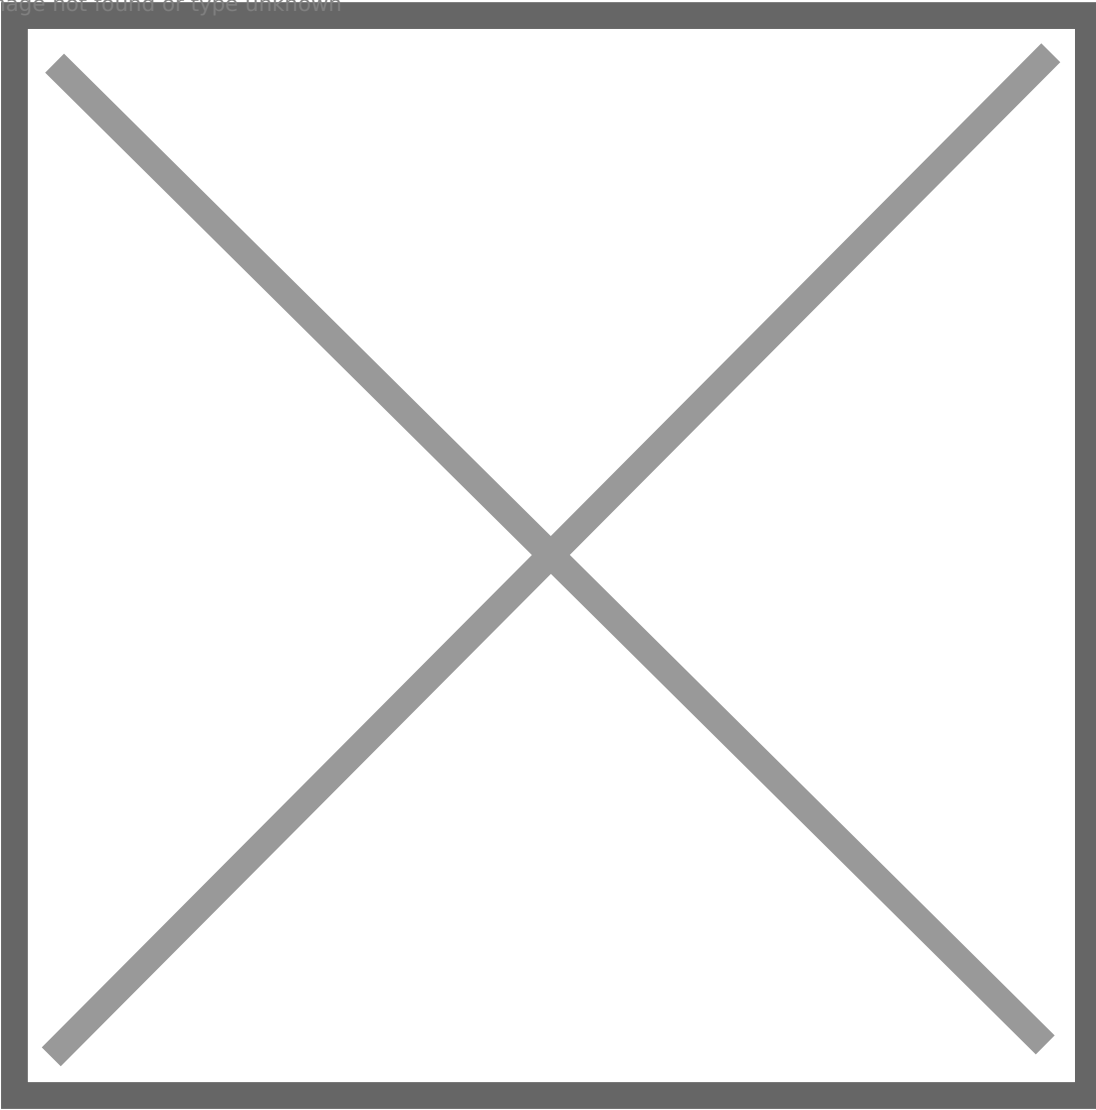


Image not found or type unknown



100Hz 6dB

MF1是35Hz-1000Hz，最上方為250Hz，所以箭頭所指的地方大約是100Hz，綠色分類點調到這邊

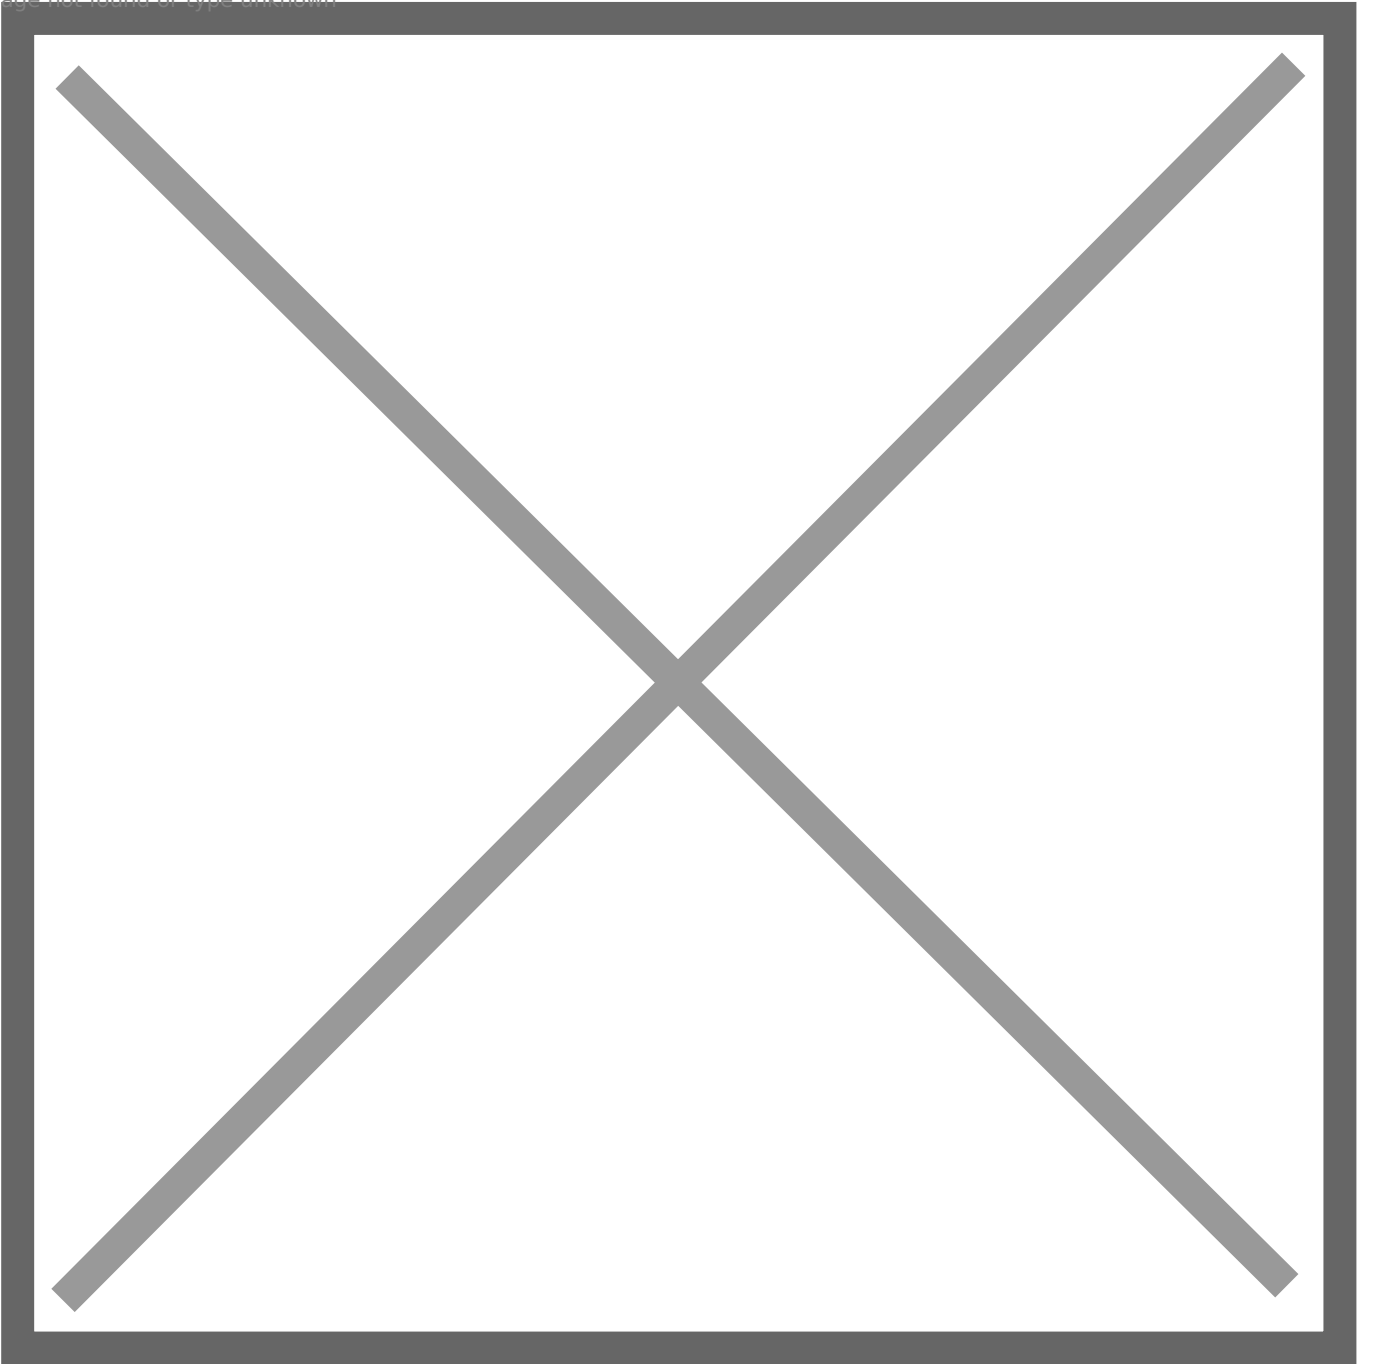

這是0dB

衰減6dB大概在這邊



Image not found or type unknown

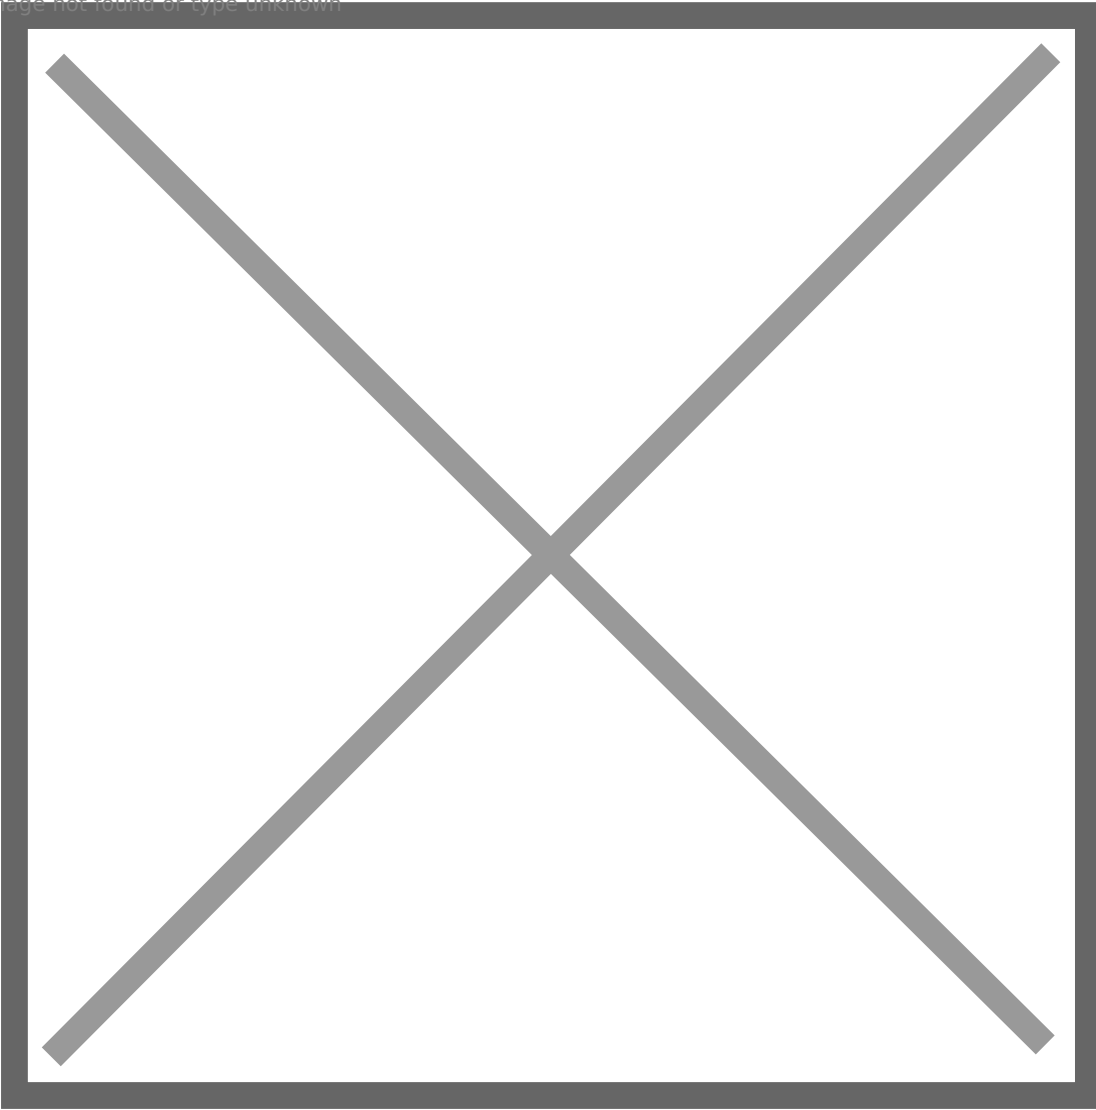


Image not found or type unknown

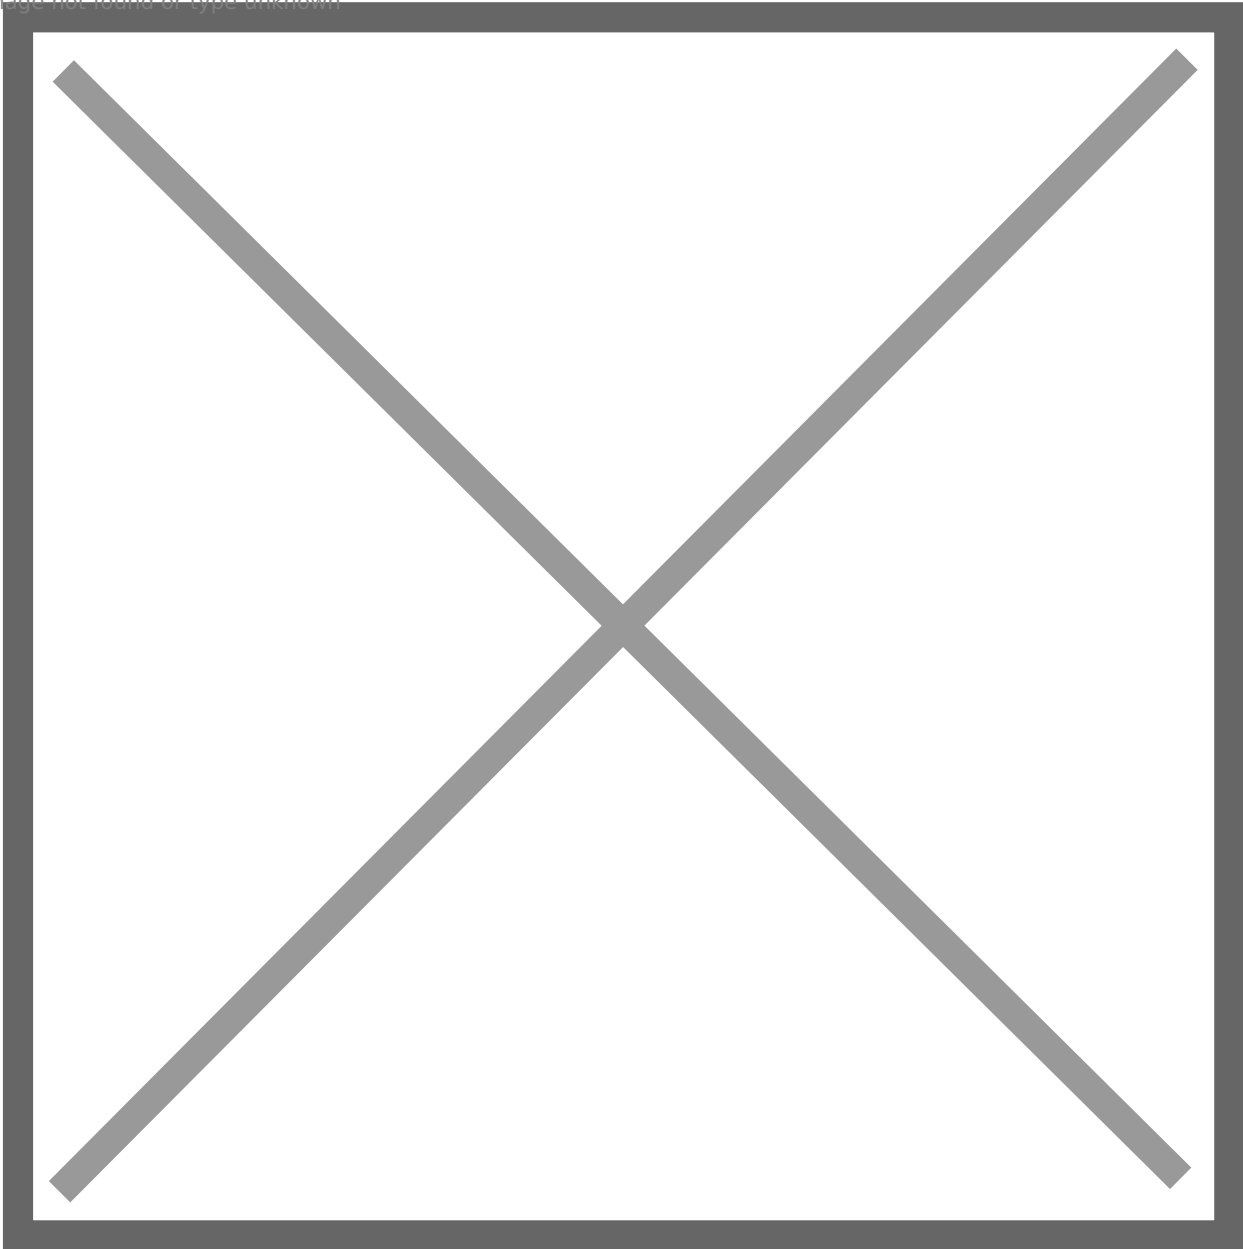


Image not found or type unknown

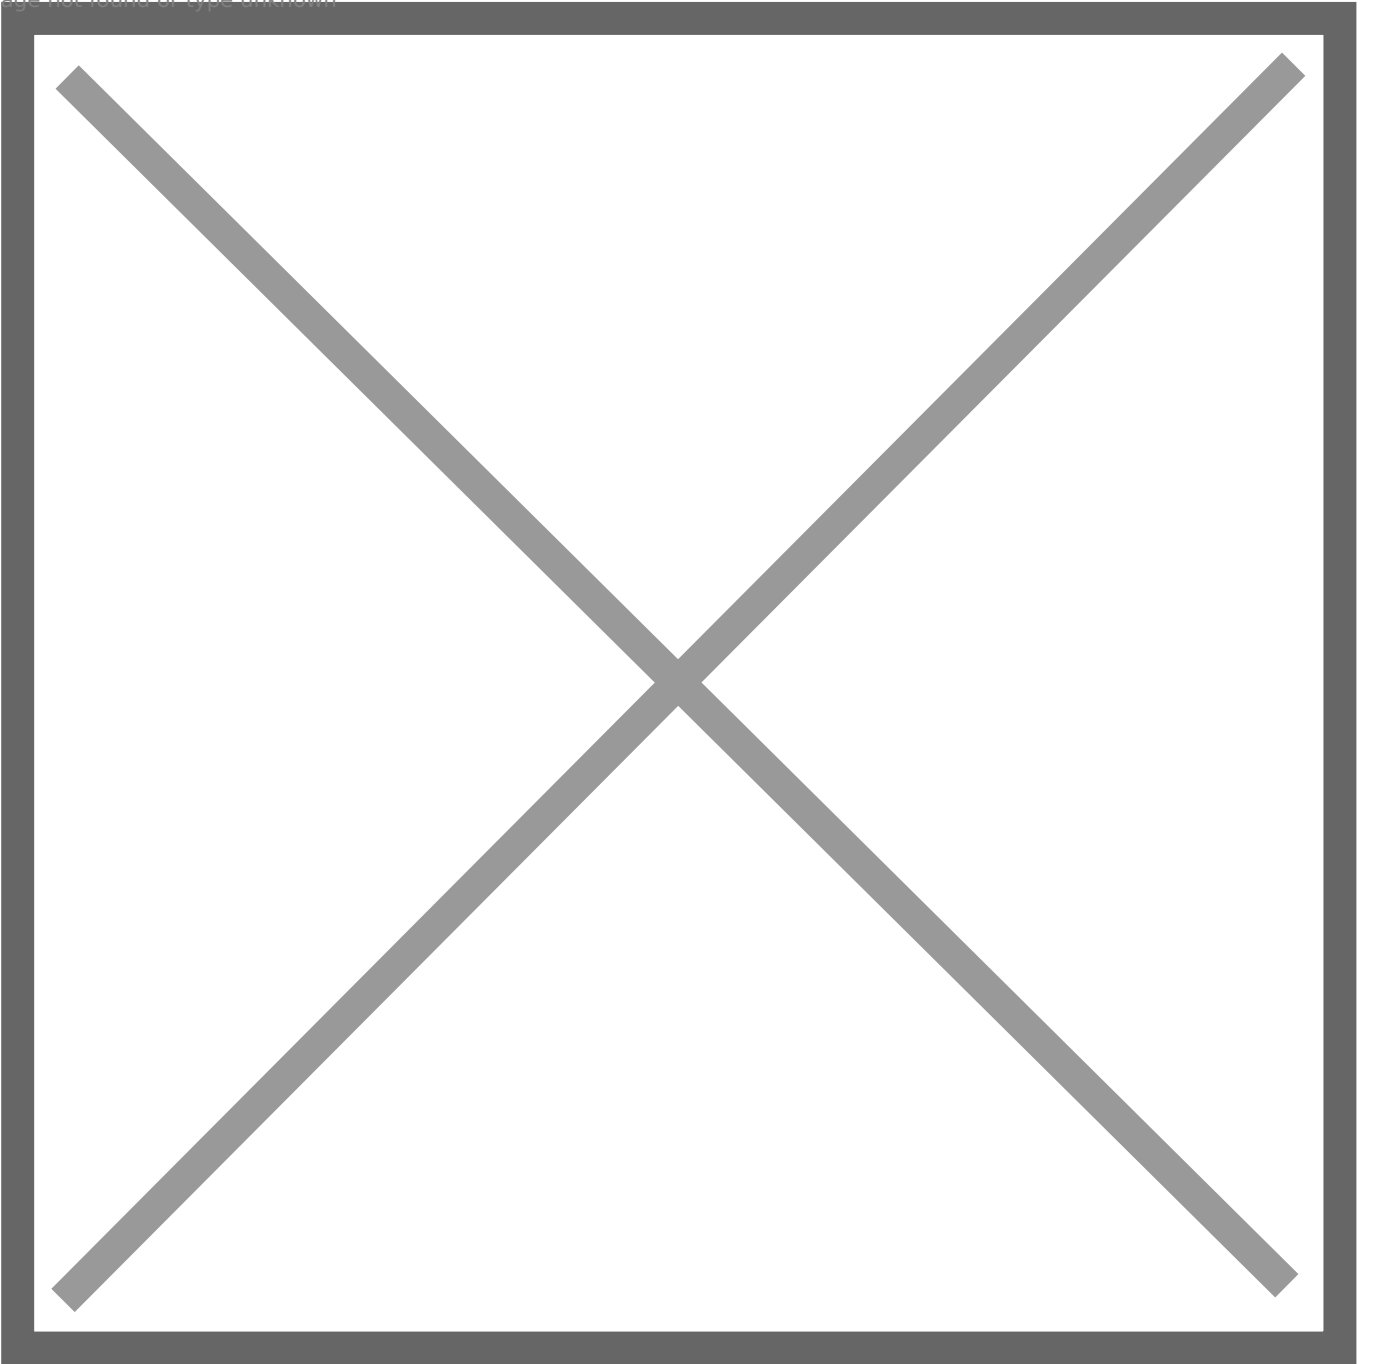


Image not found or type unknown

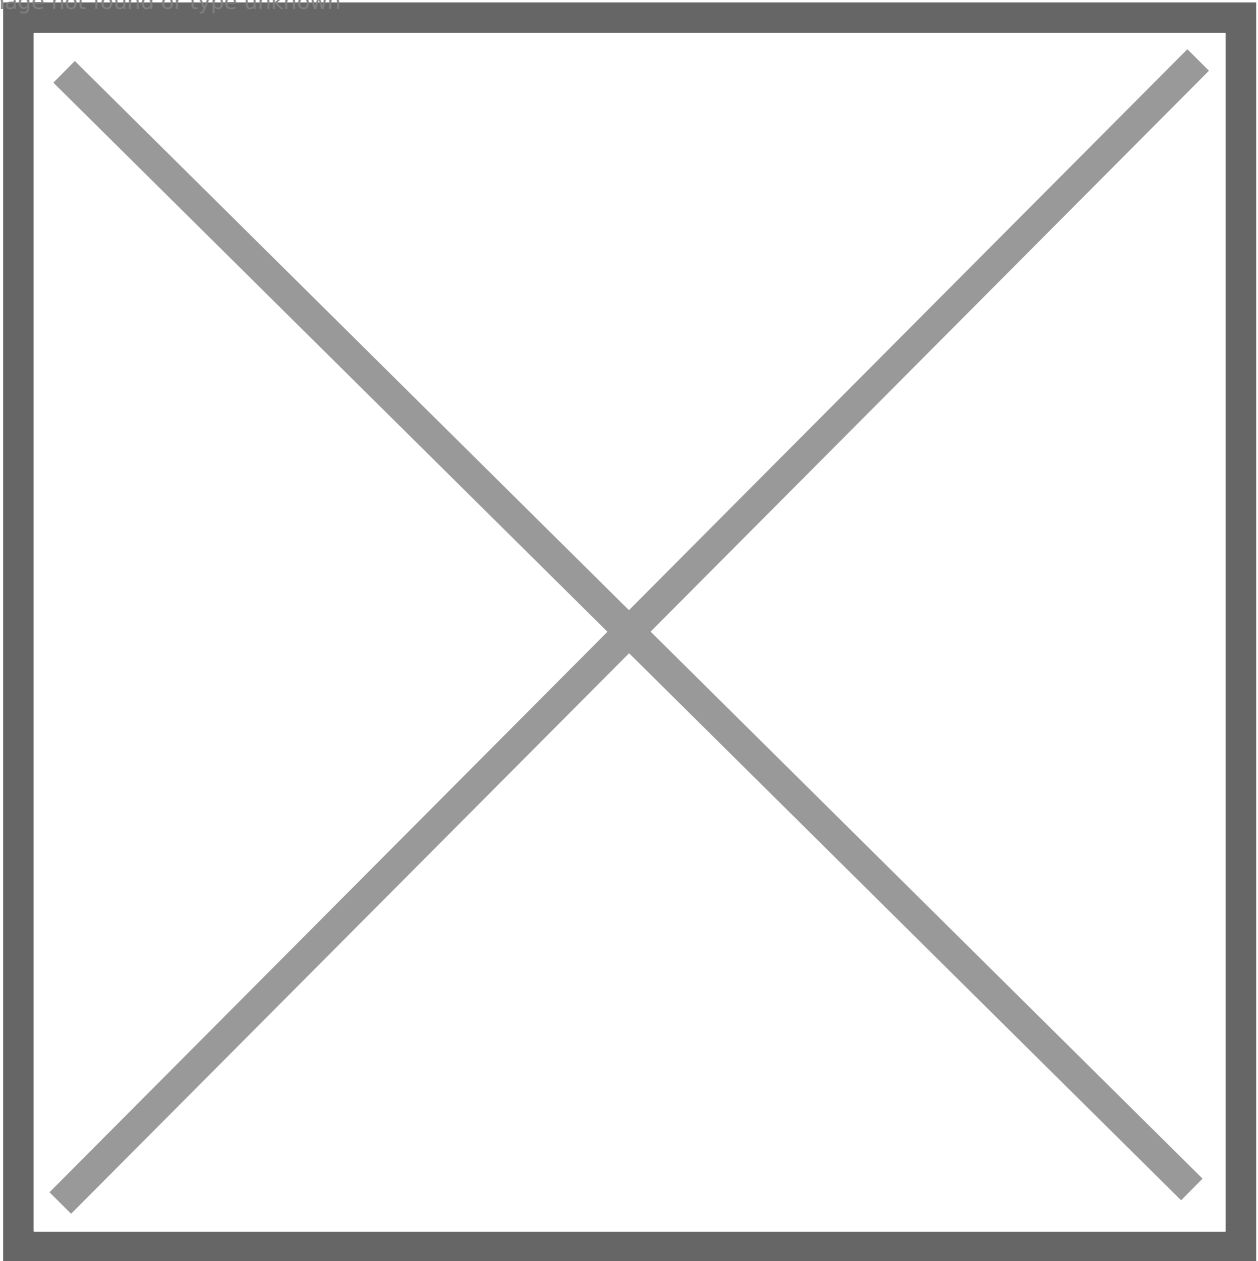


Image not found or type unknown

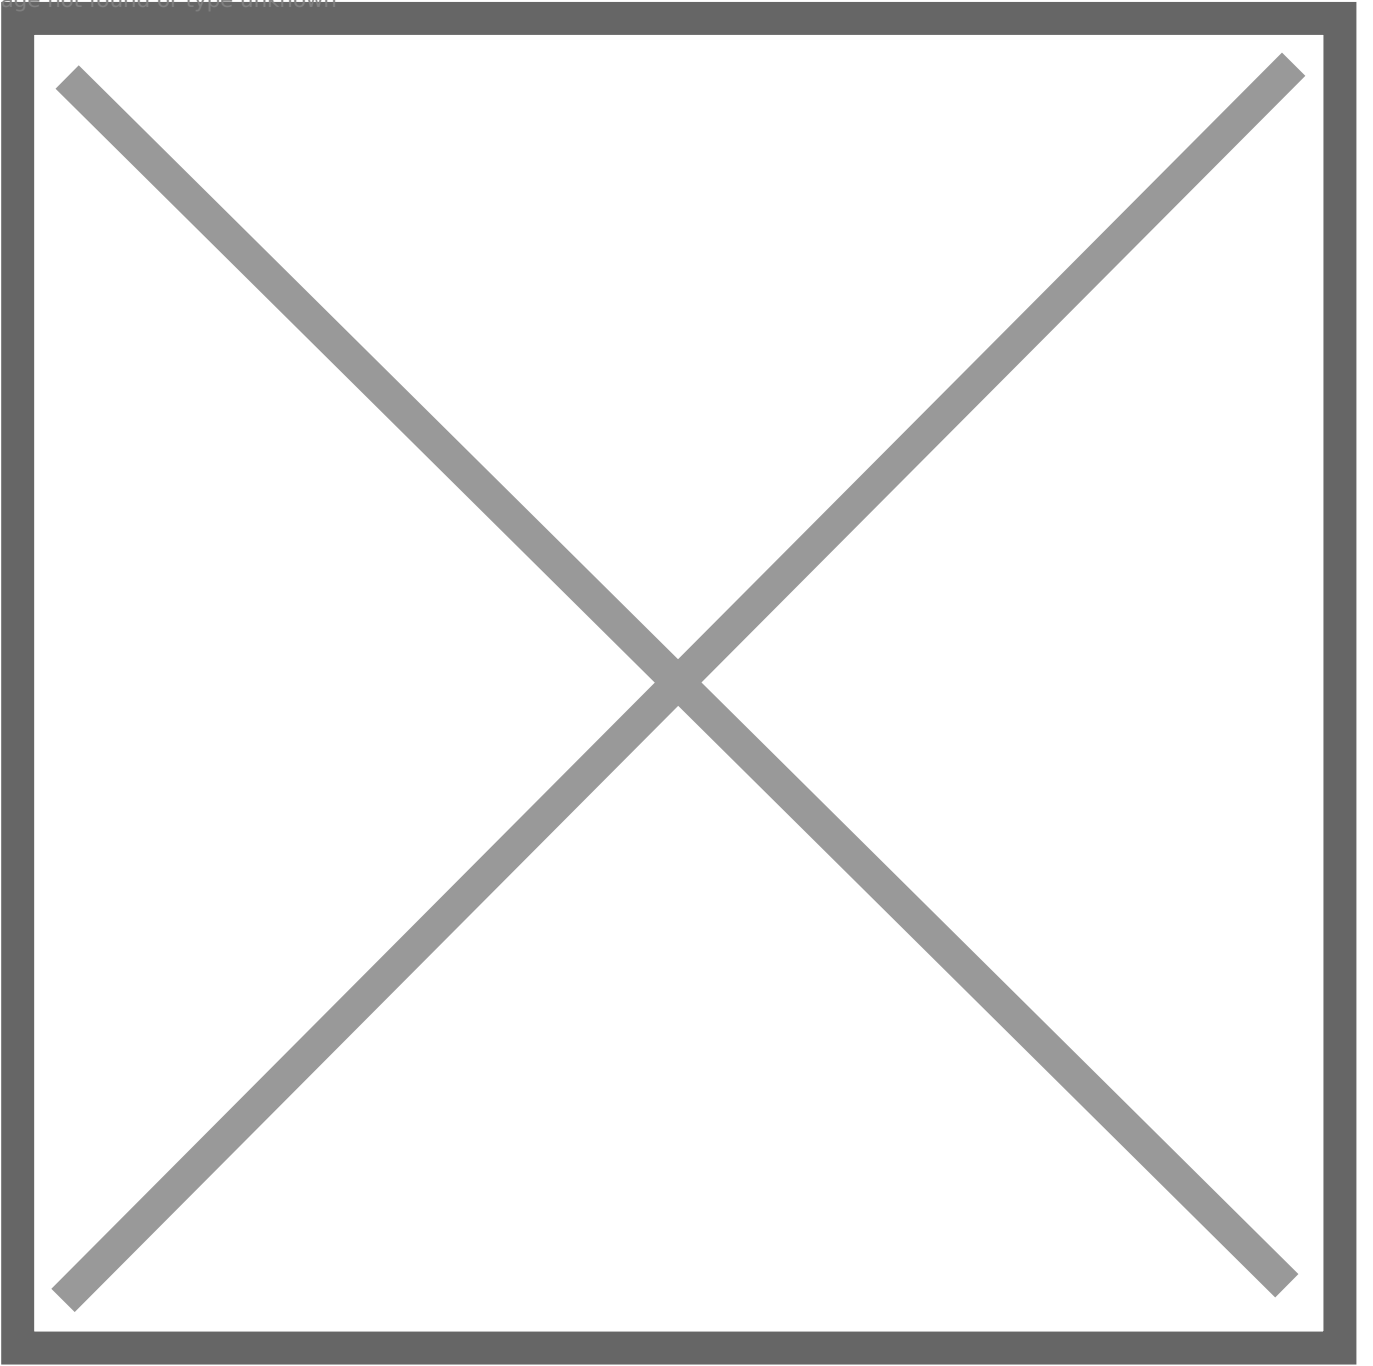


Image not found or type unknown

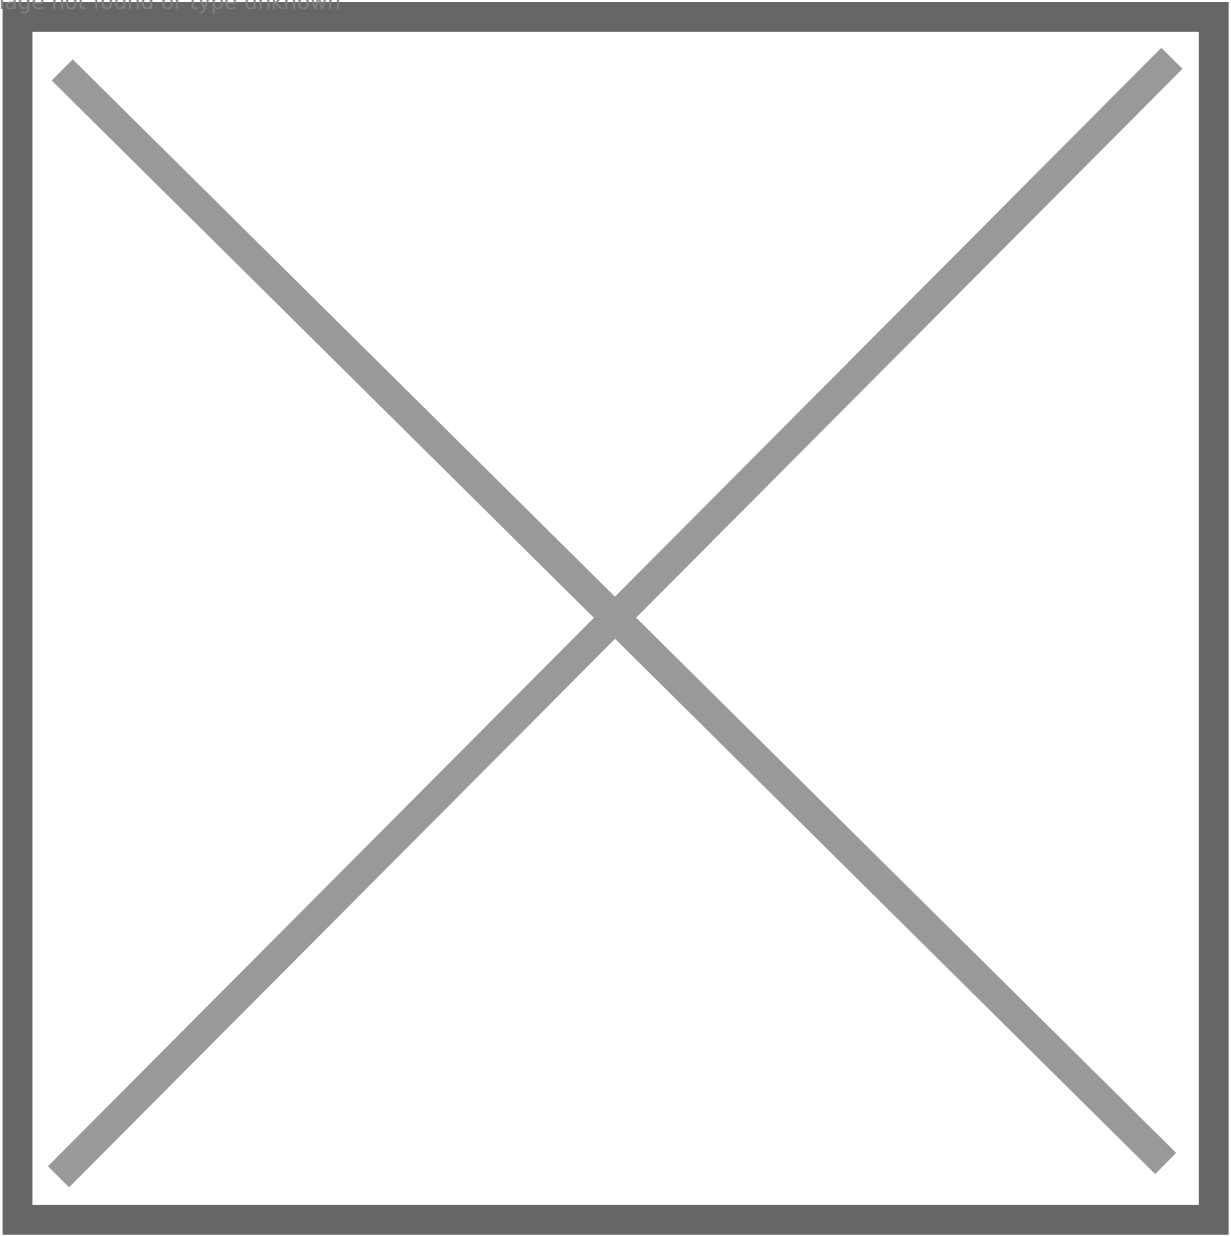


Image not found or type unknown

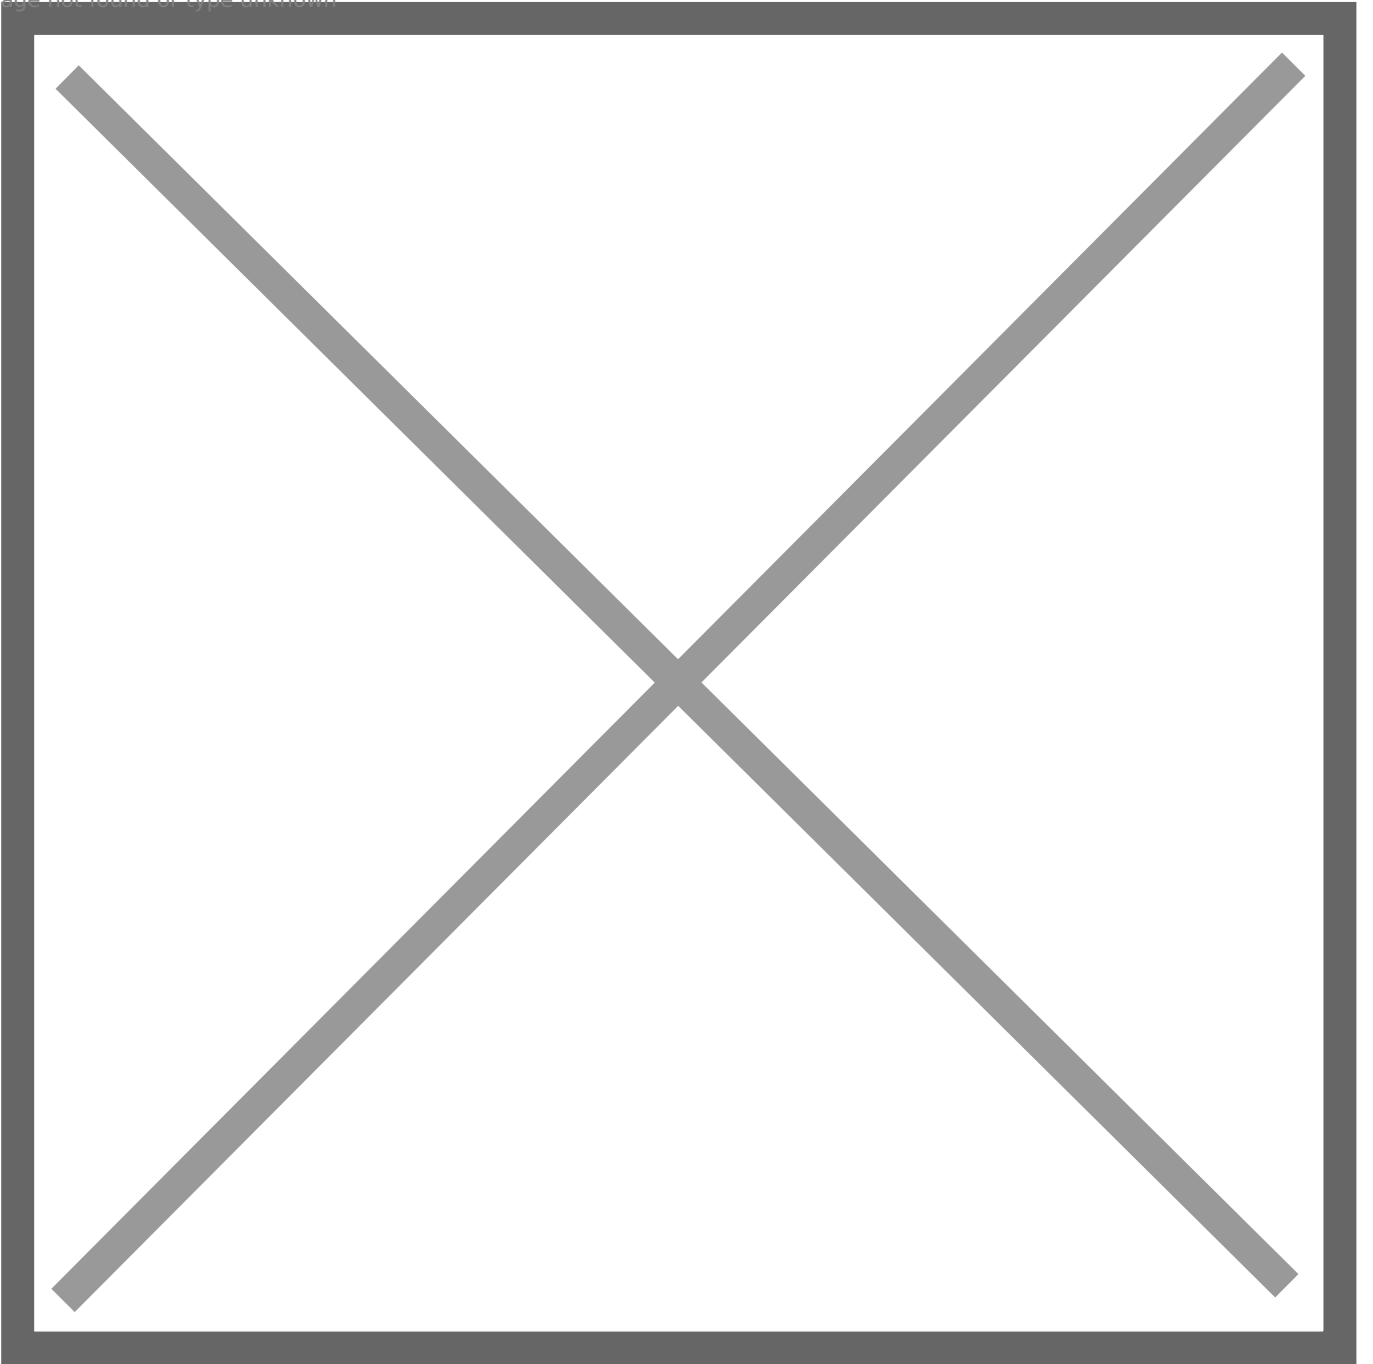




Image not found or type unknown

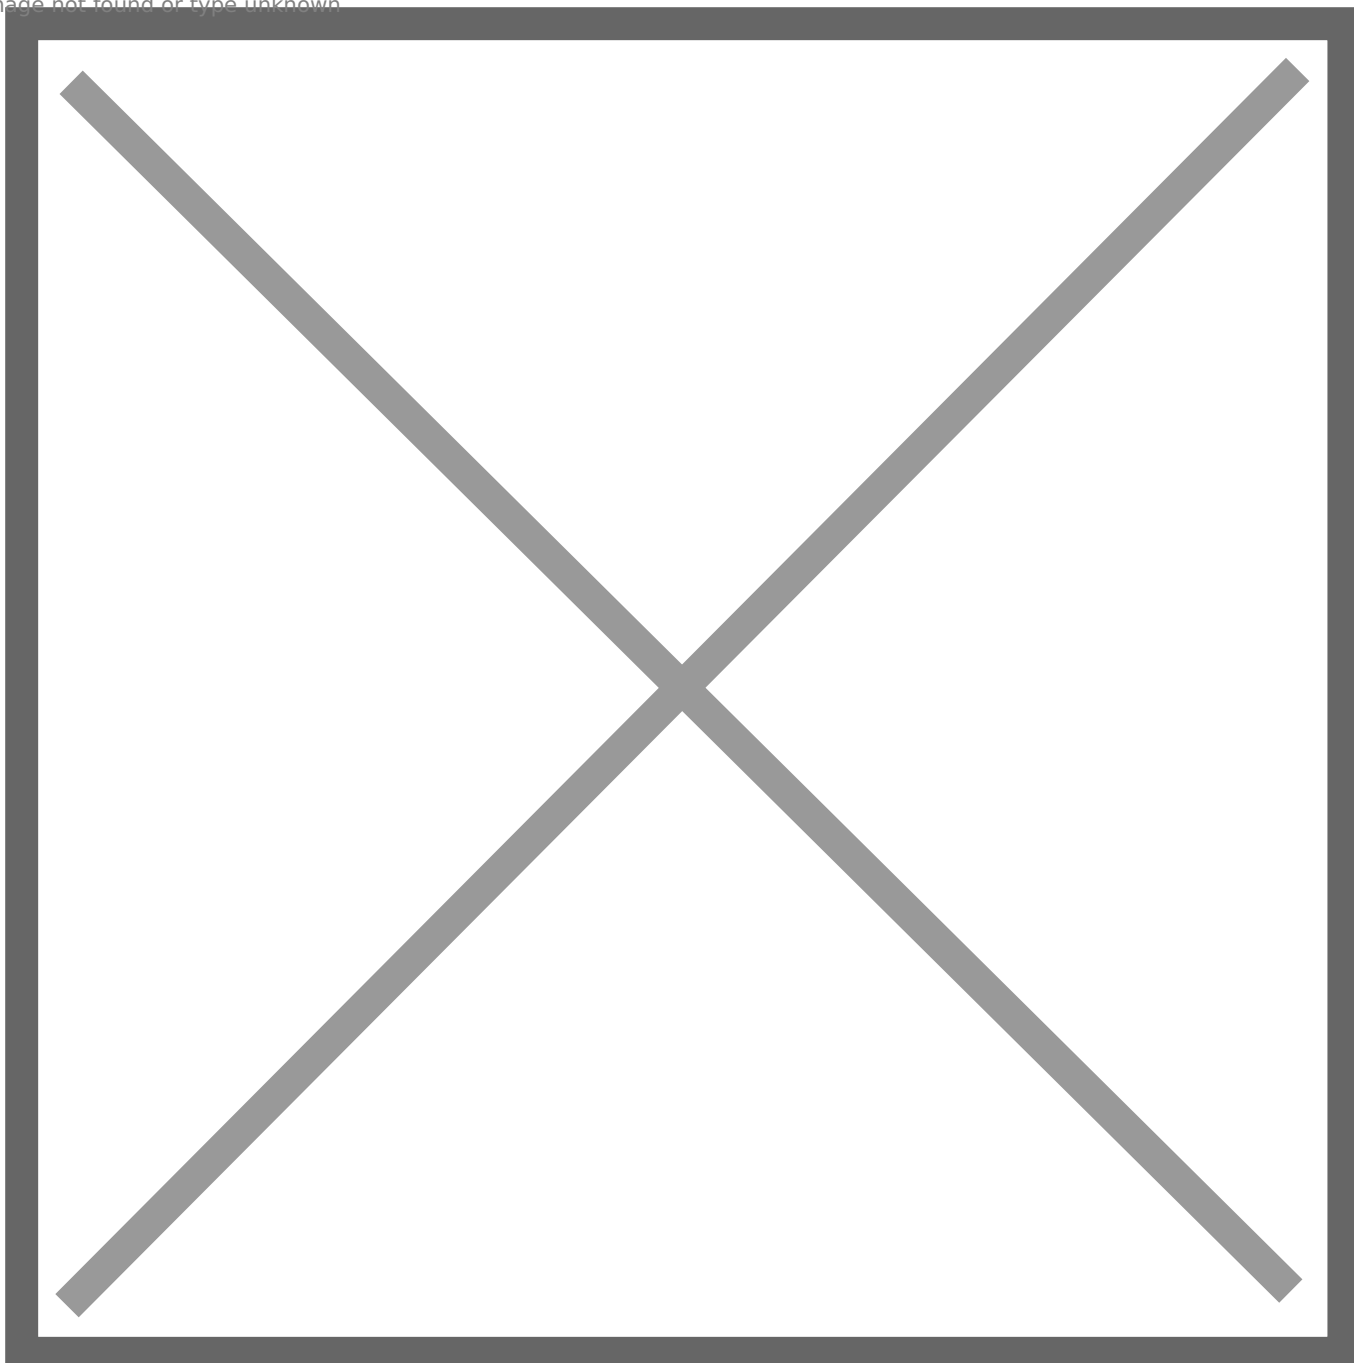


Image not found or type unknown

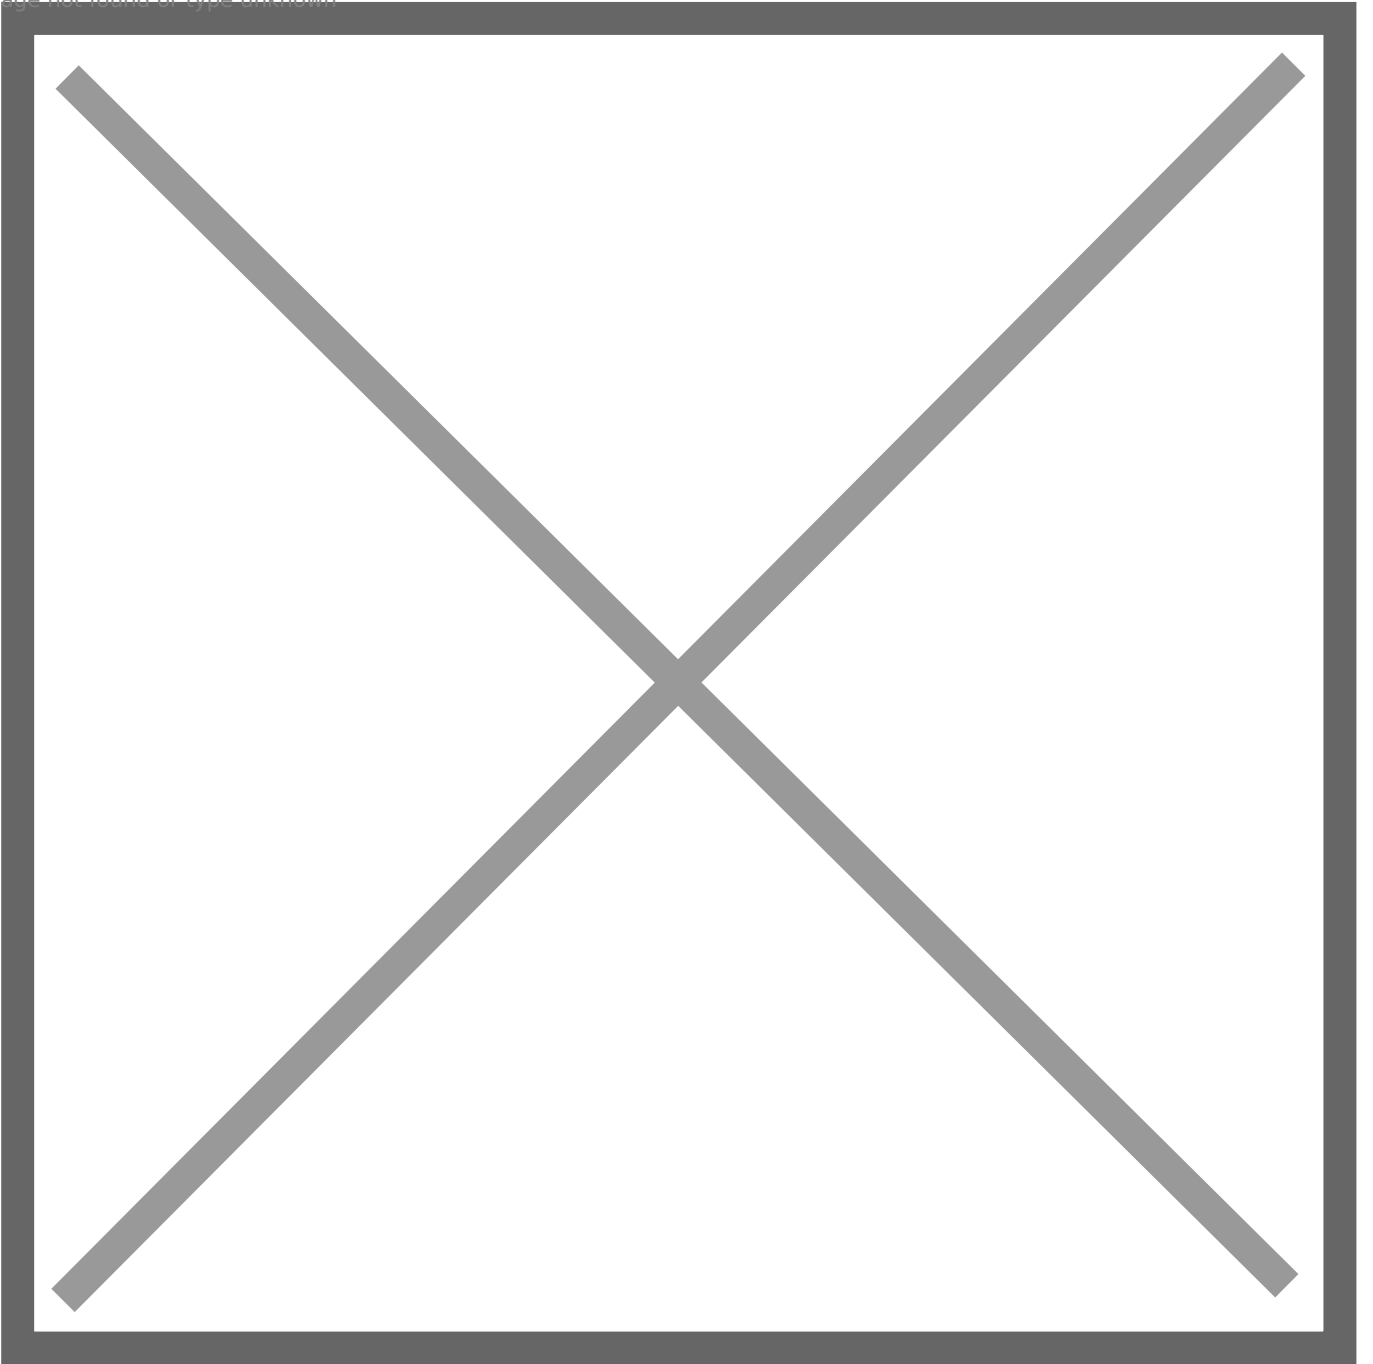


Image not found or type unknown

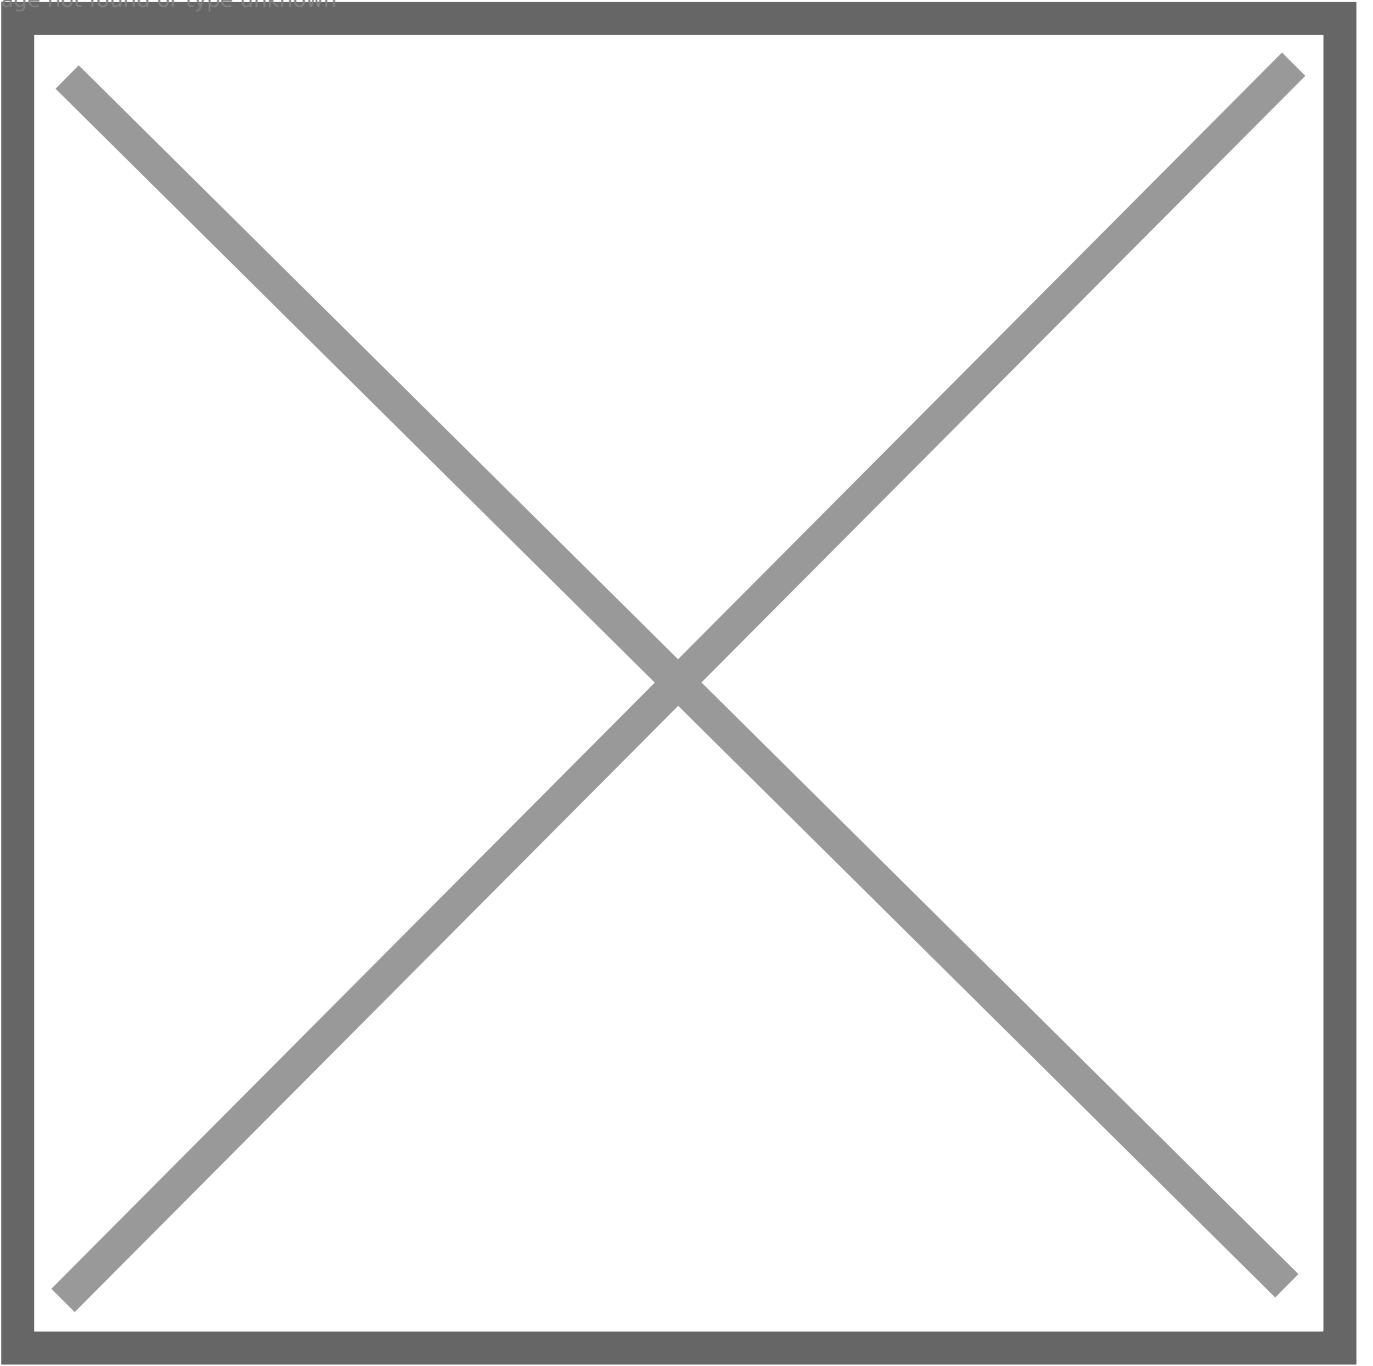


Image not found or type unknown


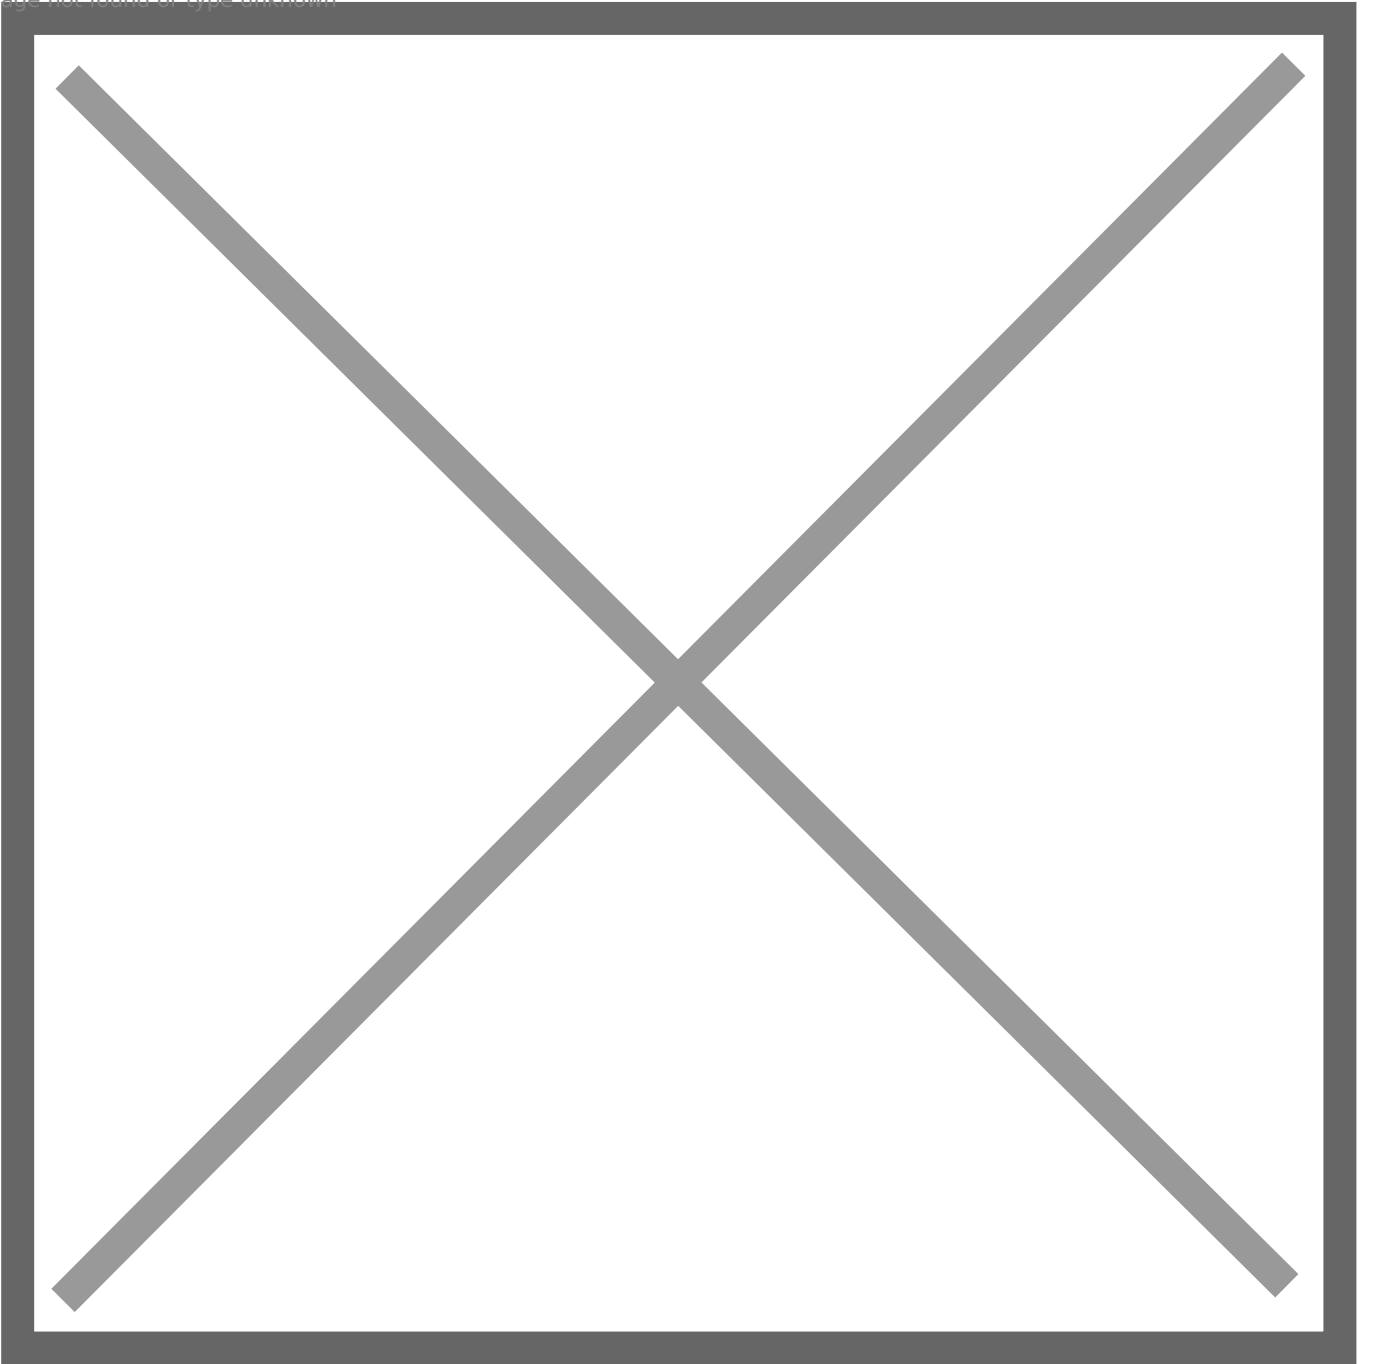


Image not found or type unknown



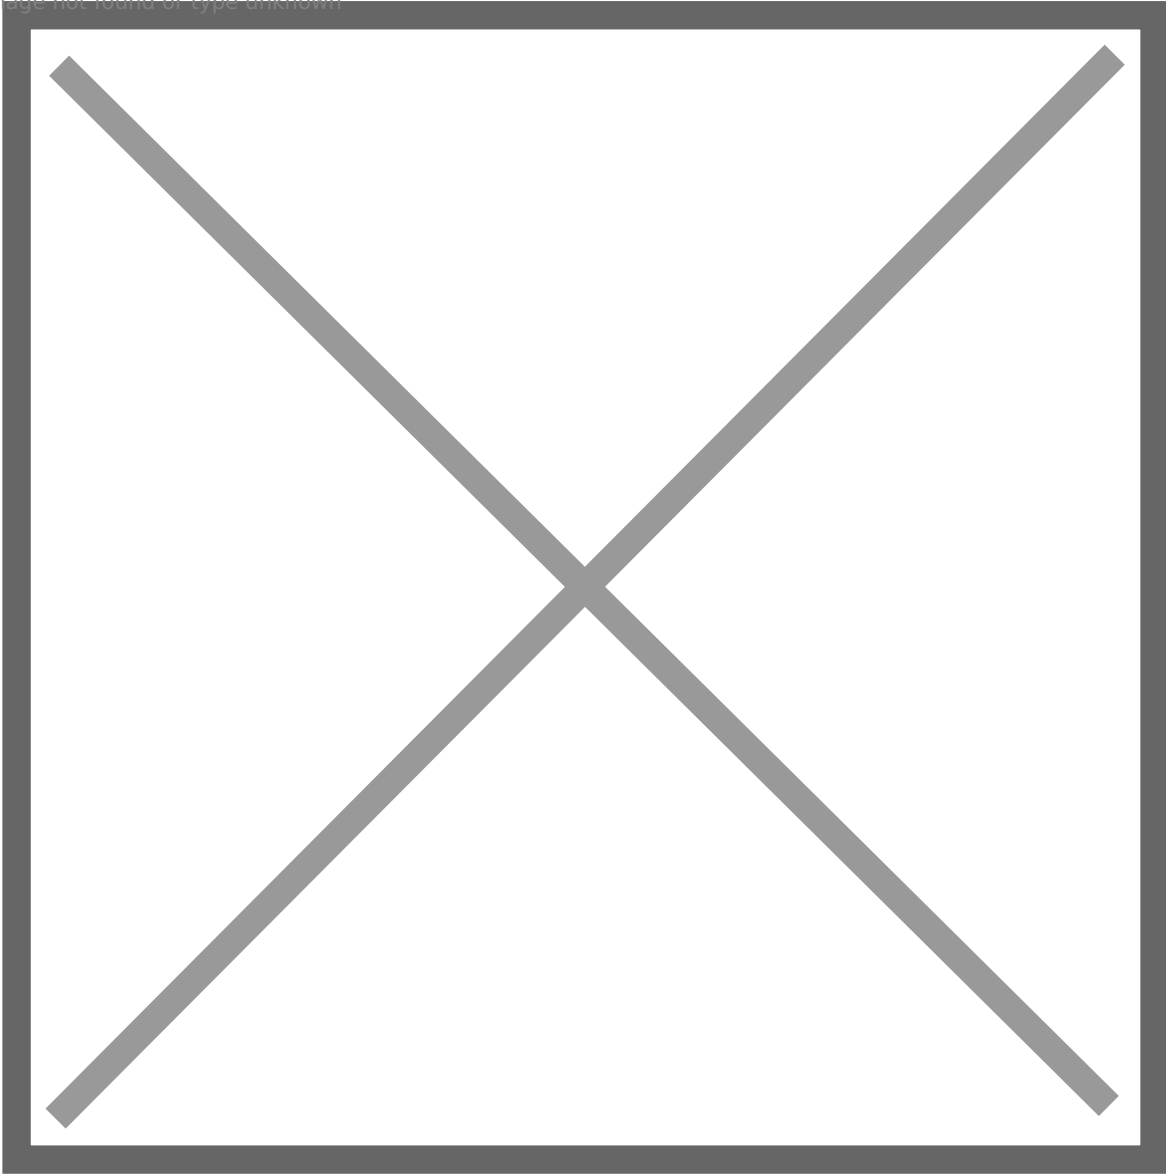

[20190829_□□□□.pdf](#)

[20190829_□□□□□□□□.pptx](#)

[□□□□GL3300□□□\(76□□□□-2023\)□□□□623T095911Z-001.zip](#)